


Cel:

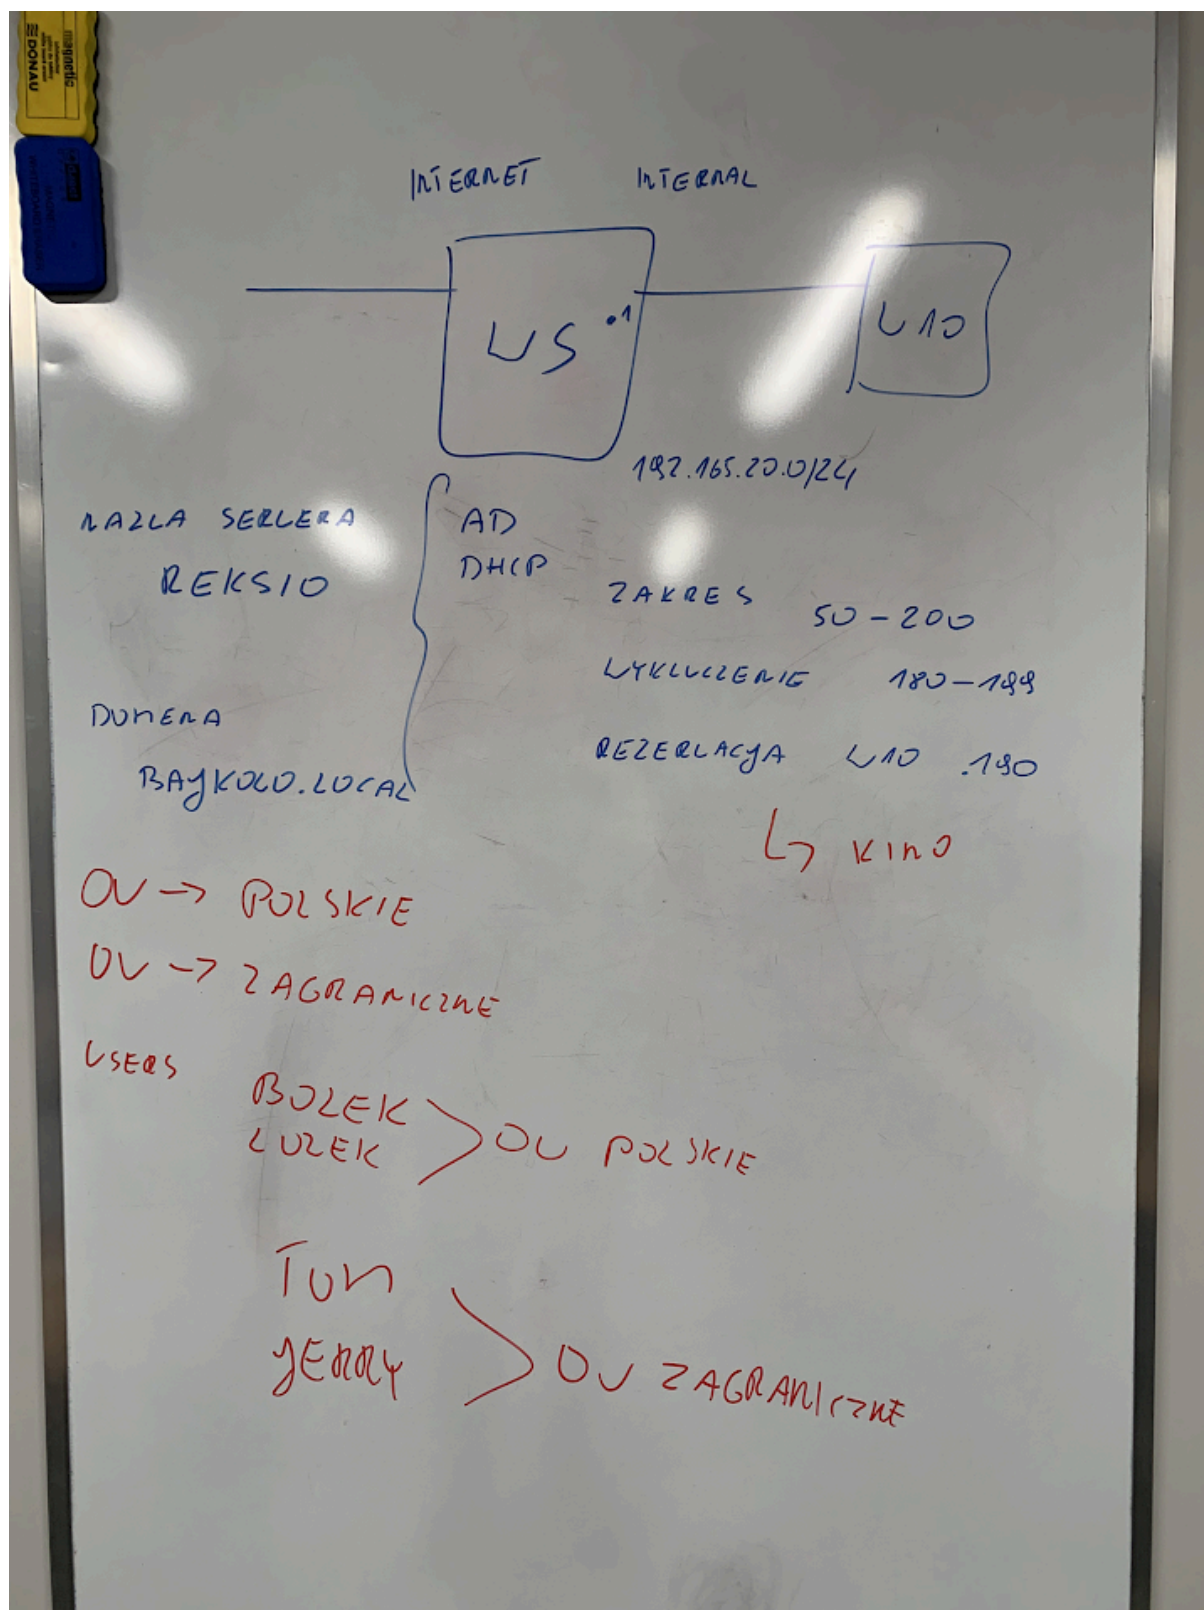

Rozwiązanie:

Server:

Rename your PC

Rename your PC

You can use a combination of letters, hyphens, and numbers.

Current PC name: WIN-I2GT55JSELN

REKSIO

NextCancel

Network Connections

Network and Internet

Network Connections

Search Network Connections

Organize

Disable this network device

Diagnose this connection

Rename this connection

INTERNET

Network


Intel(R) PRO/1000 MT Desktop Ad...

INTERNAL

Identifying...

Intel(R) PRO/1000 MT Desktop Ad...

2 items | 1 item selected

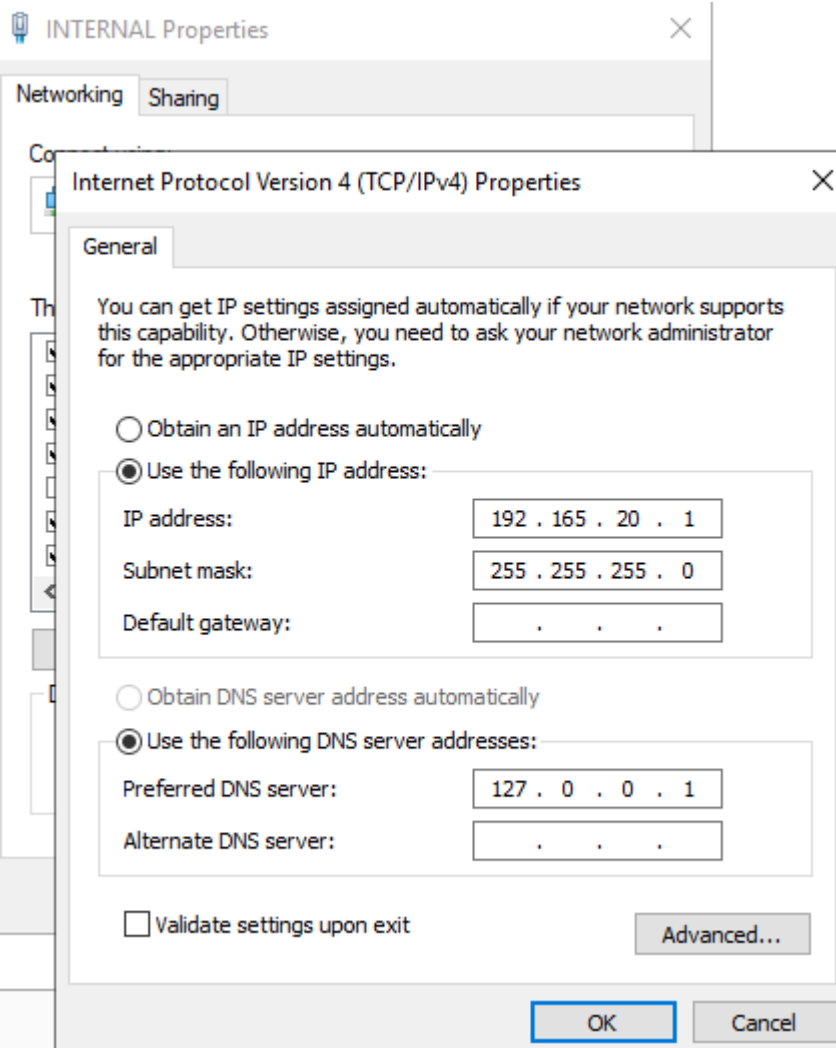

Select server roles

DESTINATION SERVER
REKSIO

Before You Begin

Installation Type

Server Selection

Server Roles

Features

AD DS

Confirmation

Results

Select one or more roles to install on the selected server.

Roles

- ☐ Active Directory Certificate Services
- ☒ **Active Directory Domain Services**
- ☐ Active Directory Federation Services
- ☐ Active Directory Lightweight Directory Services
- ☐ Active Directory Rights Management Services
- ☐ Device Health Attestation
- ☐ DHCP Server
- ☐ DNS Server
- ☐ Fax Server
- ☒ **File and Storage Services (1 of 12 installed)**
- ☐ Host Guardian Service
- ☐ Hyper-V
- ☐ Network Policy and Access Services
- ☐ Print and Document Services
- ☐ Remote Access
- ☐ Remote Desktop Services
- ☐ Volume Activation Services
- ☐ Web Server (IIS)
- ☐ Windows Deployment Services
- ☐ Windows Server Update Services

Description

Active Directory Domain Services (AD DS) stores information about objects on the network and makes this information available to users and network administrators. AD DS uses domain controllers to give network users access to permitted resources anywhere on the network through a single logon process.

< Previous

Next >

Install

Cancel



Feature installation

Configuration required. Installation succeeded on REKSIO.

Deployment Configuration

TARGET SERVER
REKSIO

Deployment Configuration

Domain Controller Options

Additional Options

Paths

Review Options

Prerequisites Check

Installation

Results

Select the deployment operation

- ☐ Add a domain controller to an existing domain
- ☐ Add a new domain to an existing forest
- ☒ Add a new forest

Specify the domain information for this operation

Root domain name:

bajkowo.local

[More about deployment configurations](#)

< Previous

Next >

Install

Cancel

Results

TARGET SERVER
REKSIO

✓ This server was successfully configured as a domain controller

[Show more](#)

You're about to be signed out

The computer is being restarted because Active Directory Domain Services was installed or removed.

Close

Results

be done to all the physical network adapters for reliable Domain Name System (DNS) operation.



A delegation for this DNS server cannot be created because the authoritative parent zone cannot be found or it does not run Windows DNS server. If you are integrating with an existing DNS infrastructure, you should manually create a delegation to this DNS server in the parent zone to ensure reliable name resolution from outside the domain "bajkowo.local". Otherwise, no action is required.


[More about results](#)

< Previous

Next >

Close

Cancel

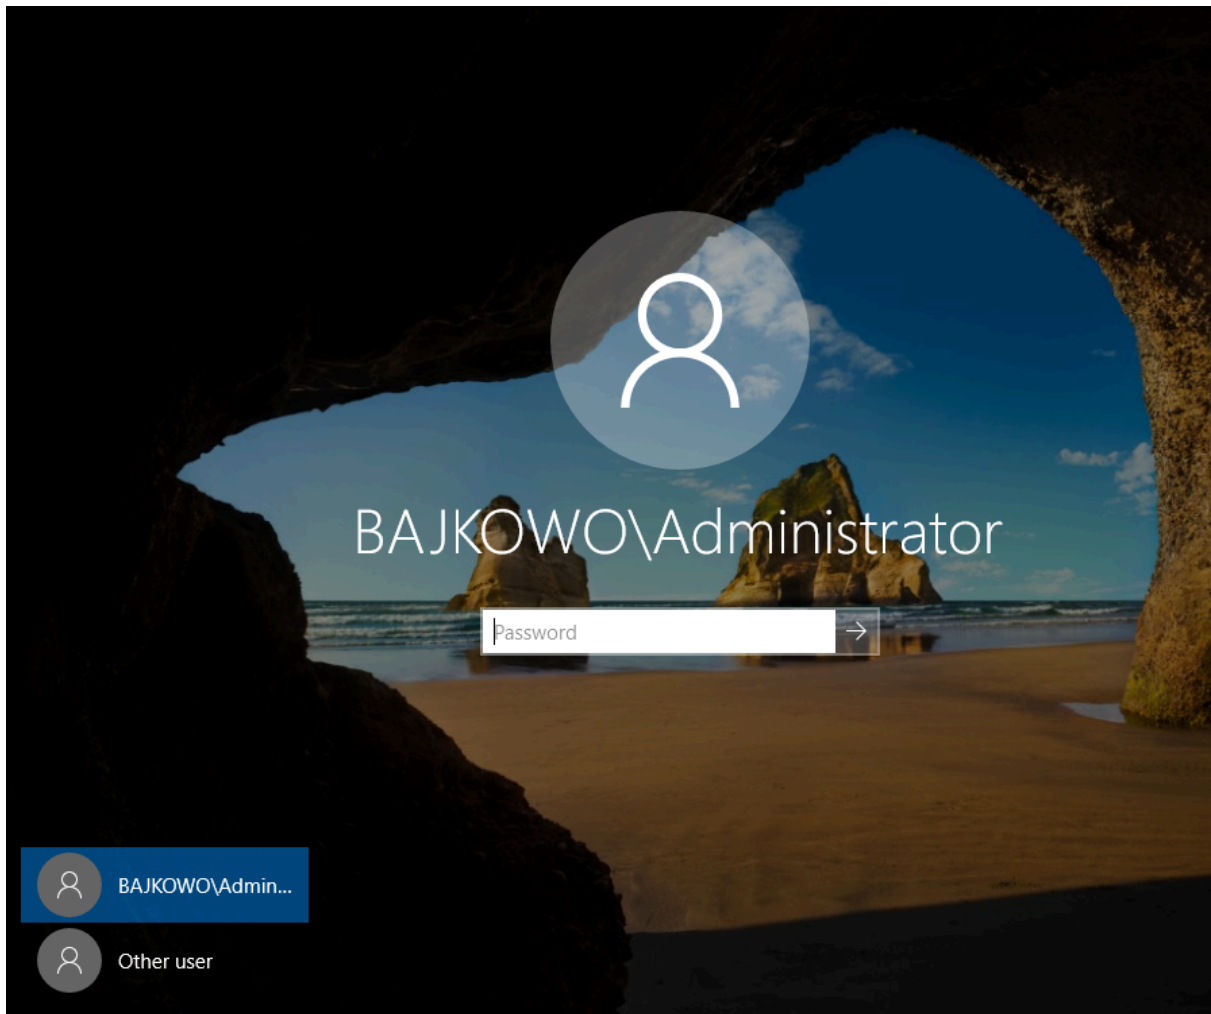

mamy AD.

Select server roles

DESTINATION SERVER
REKSIO.bajkowo.local

Before You Begin

Installation Type

Server Selection

Server Roles

Features

DHCP Server

Confirmation

Results

Select one or more roles to install on the selected server.

Roles

- ☐ Active Directory Certificate Services
- ☒ Active Directory Domain Services (Installed)
- ☐ Active Directory Federation Services
- ☐ Active Directory Lightweight Directory Services
- ☐ Active Directory Rights Management Services
- ☐ Device Health Attestation
- ☒ **DHCP Server**
- ☒ DNS Server (Installed)
- ☐ Fax Server
- ▷ ☒ File and Storage Services (2 of 12 installed)
- ☐ Host Guardian Service
- ☐ Hyper-V
- ☐ Network Policy and Access Services
- ☐ Print and Document Services
- ☐ Remote Access
- ☐ Remote Desktop Services
- ☐ Volume Activation Services
- ☐ Web Server (IIS)
- ☐ Windows Deployment Services
- ☐ Windows Server Update Services

Description

Dynamic Host Configuration Protocol (DHCP) Server enables you to centrally configure, manage, and provide temporary IP addresses and related information for client computers.

< Previous

Next >

Install

Cancel

Installation progress

DESTINATION SERVER
REKSIO.bajkowo.local

Before You Begin

Installation Type

Server Selection

Server Roles

Features

DHCP Server

Confirmation

Results

View installation progress



Feature installation

Installation succeeded on REKSIO.bajkowo.local.

DHCP Server

Remote Server Administration Tools

Role Administration Tools

DHCP Server Tools



You can close this wizard without interrupting running tasks. View task progress or open this page again by clicking Notifications in the command bar, and then Task Details.

[Export configuration settings](#)

< Previous

Next >

Close

Cancel

DHCP

File Action View Help

← → ↶ ↷ ↺ ↻ ? 🖥

DHCP

▼ reksio.bajkow

▼ IPv4

Server

Policie

> Filters

> IPv6

New Scope Wizard

Scope Name

You have to provide an identifying scope name. You also have the option of providing a description.

Type a name and description for this scope. This information helps you quickly identify how the scope is to be used on your network.

Name:

KINO

Description:

< Back

Next >

Cancel

DHCP

File Action View Help

DHCP

- reksio.bajkow
 - IPv4
 - Server
 - Policy
 - Filters
 - IPv6

New Scope Wizard

IP Address Range

You define the scope address range by identifying a set of consecutive IP addresses.

Configuration settings for DHCP Server

Enter the range of addresses that the scope distributes.

Start IP address: 192 . 165 . 20 . 50

End IP address: 192 . 165 . 20 . 200

Configuration settings that propagate to DHCP Client

Length: 24

Subnet mask: 255 . 255 . 255 . 0

< Back Next > Cancel

New Scope Wizard

Add Exclusions and Delay

Exclusions are addresses or a range of addresses that are not distributed by the server. A delay is the time duration by which the server will delay the transmission of a DHCP OFFER message.

Type the IP address range that you want to exclude. If you want to exclude a single address, type an address in Start IP address only.

Start IP address: End IP address:

. Add

Excluded address range:

192.165.20.180 to 192.165.20.199 Remove

Subnet delay in milli second:

0

< Back

Next >

Cancel

New Scope Wizard

Activate Scope

Clients can obtain address leases only if a scope is activated.




Do you want to activate this scope now?

- ☒ Yes, I want to activate this scope now
- ☐ No, I will activate this scope later

< Back

Next >



Cancel

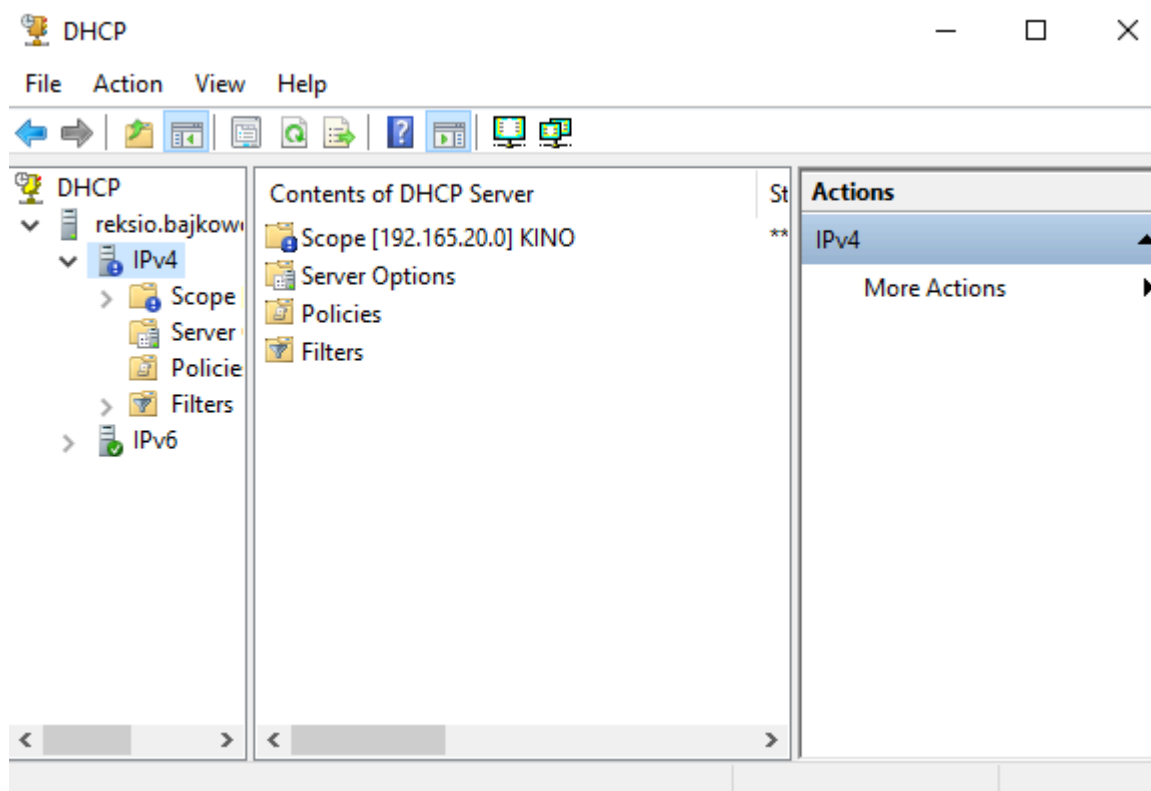



sprawdzenie mac adresu windows10:

```
Ethernet adapter Ethernet:

    Connection-specific DNS Suffix  . : bajkowo.local
    Description . . . . . : Intel(R) PRO/1000 MT Desktop Adapter
    Physical Address. . . . . : 08-00-27-3F-84-96
    DHCP Enabled. . . . . : Yes
    Autoconfiguration Enabled . . . . : Yes
    Link-local IPv6 Address . . . . . : fe80::dd12:5b71:3982:2048%3(Preferred)
    IPv4 Address. . . . . : 192.165.20.50(Preferred)
    Subnet Mask . . . . . : 255.255.255.0
    Lease Obtained. . . . . : Tuesday, August 25, 2026 2:01:03 PM
    Lease Expires . . . . . : Wednesday, September 2, 2026 2:01:05 PM
    Default Gateway . . . . . :
    DHCP Server . . . . . : 192.165.20.1
    DHCPv6 IAID . . . . . : 50855975
    DHCPv6 Client DUID. . . . . : 00-01-00-01-32-1F-9F-34-08-00-27-3F-84-96
    DNS Servers . . . . . : 192.165.20.1
    NetBIOS over Tcpip. . . . . : Enabled
```

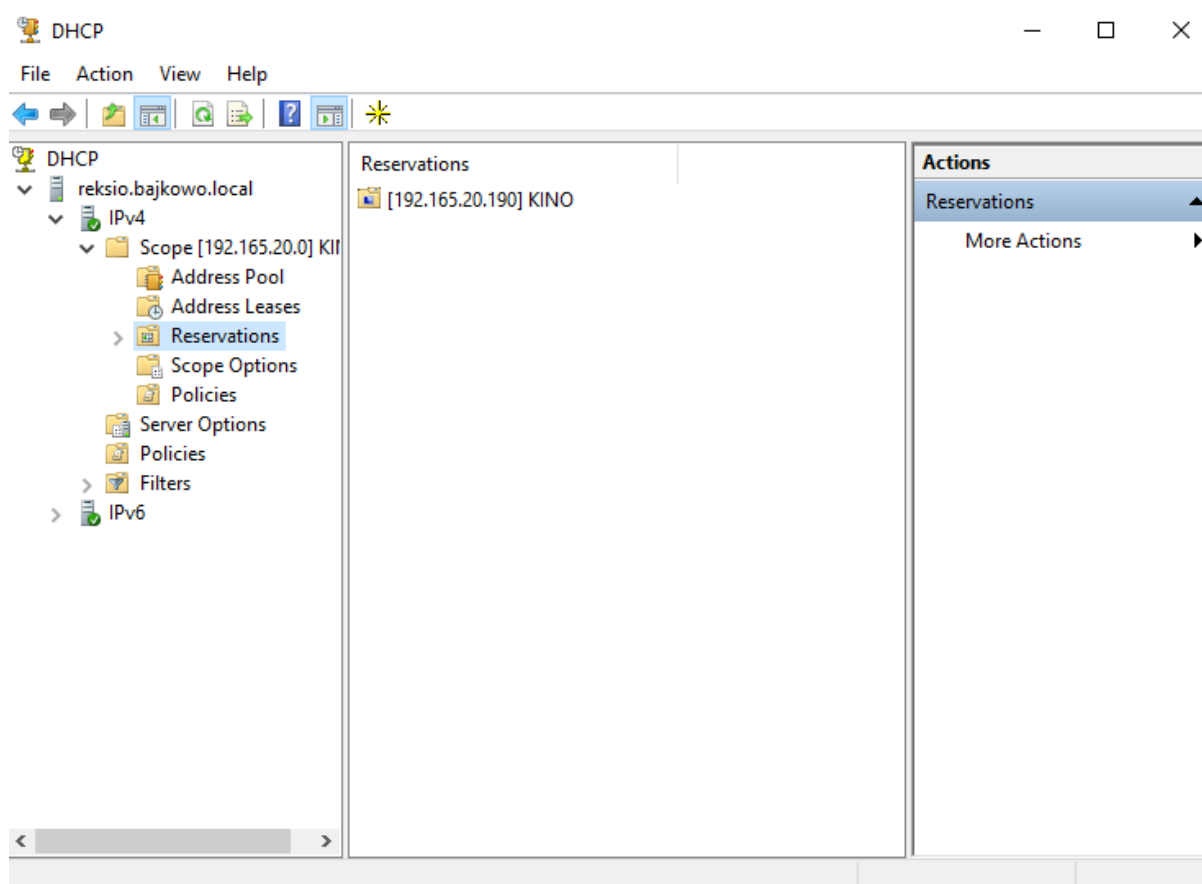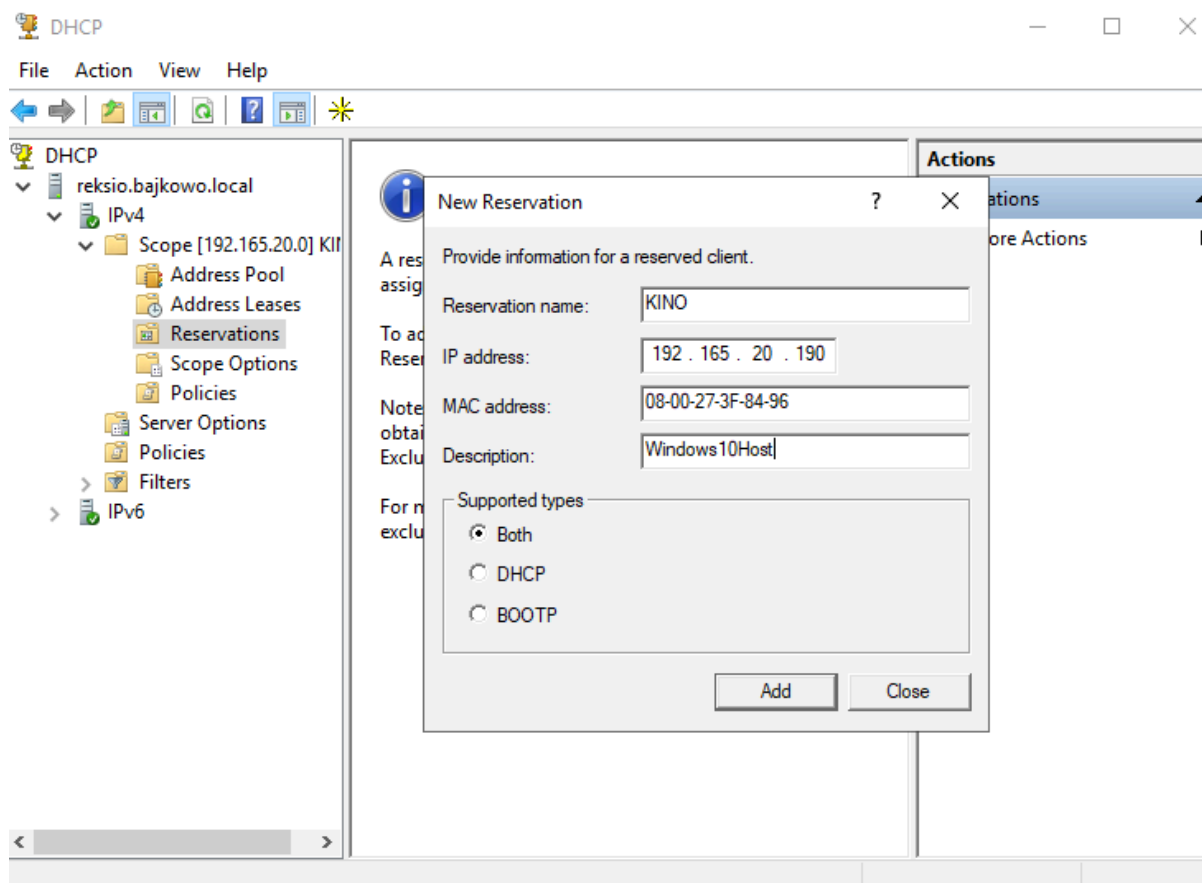

mamy dhcp.

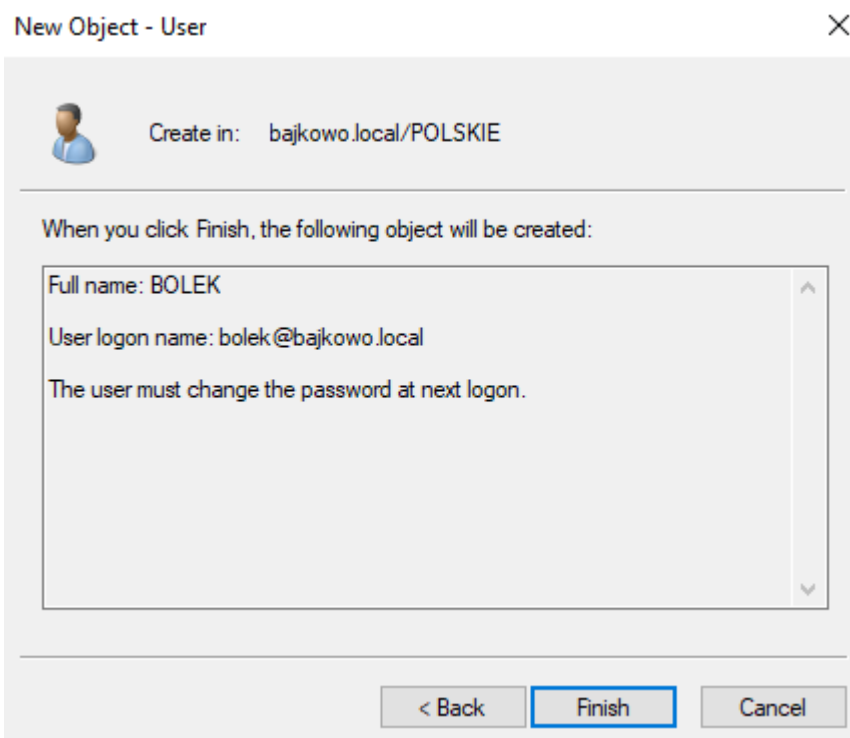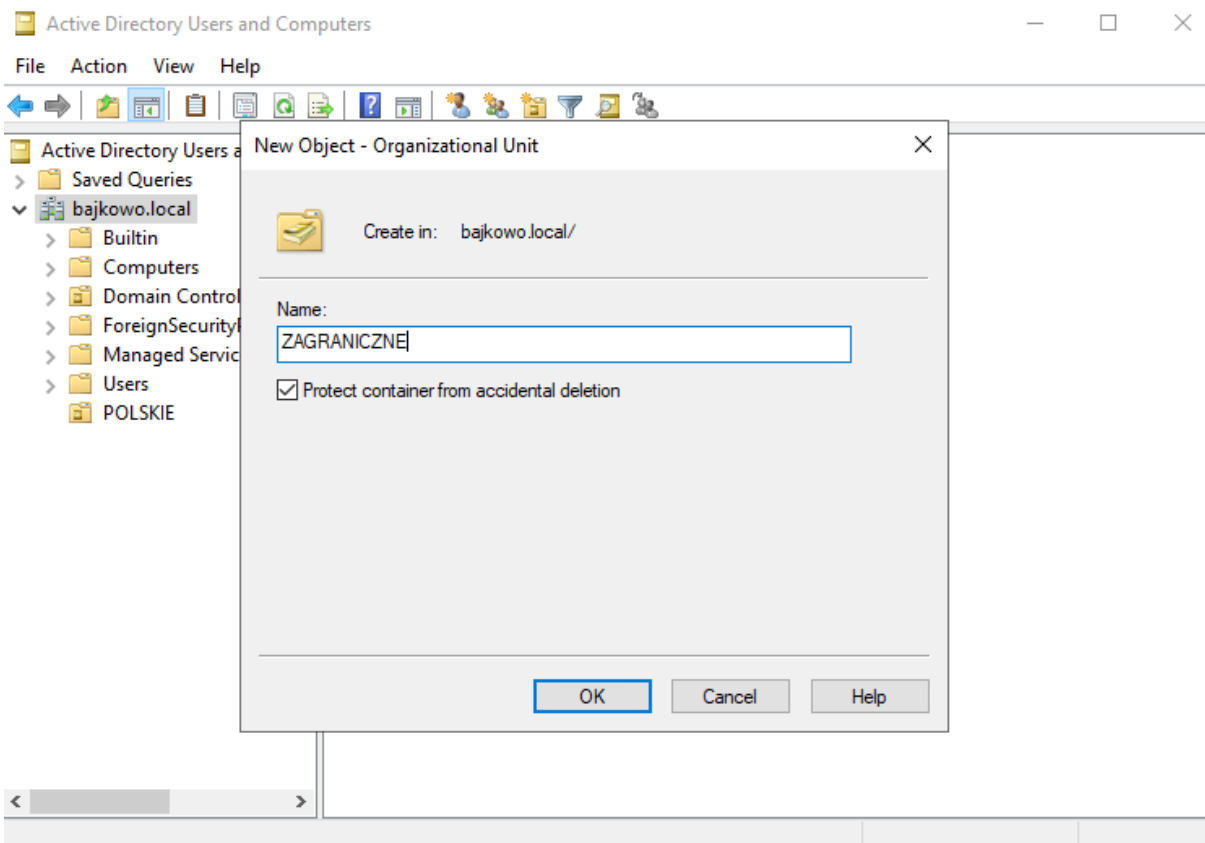

Active Directory Users and Computers

File Action View Help

Active Directory Users and Computers

- Saved Queries
- ▼ bajkowo.local
 - Builtin
 - Computers
 - Domain Controllers
 - ForeignSecurityPrincipals
 - Managed Service Accounts
 - Users
 - POLSKIE
 - ZAGRANICZNE

Name	Type	Description
BOLEK	User	
LOLEK	User	

Active Directory Users and Computers

File Action View Help

Active Directory Users and Computers

- Saved Queries
- ▼ bajkowo.local
 - Builtin
 - Computers
 - Domain Controllers
 - ForeignSecurityPrincipals
 - Managed Service Accounts
 - Users
 - POLSKIE
 - ZAGRANICZNE

Name	Type	Description
JERRY	User	
TOM	User	

Win10:

Po zrestartowaniu karty sieciowej dostaliśmy poprawny adres ip z rezerwacji DHCP.

```
C:\Users\vbuser>ipconfig /all
```

Windows IP Configuration

```
Host Name . . . . . : DESKTOP-USEJIHT
Primary Dns Suffix . . . . . :
Node Type . . . . . : Hybrid
IP Routing Enabled. . . . . : No
WINS Proxy Enabled. . . . . : No
DNS Suffix Search List. . . . . : bajkowo.local
```

Ethernet adapter Ethernet:

```
Connection-specific DNS Suffix . : bajkowo.local
Description . . . . . : Intel(R) PRO/1000 MT Desktop Adapter
Physical Address. . . . . : 08-00-27-3F-84-96
DHCP Enabled. . . . . : Yes
Autoconfiguration Enabled . . . . : Yes
Link-local IPv6 Address . . . . . : fe80::dd12:5b71:3982:2048%3(Preferred)
IPv4 Address. . . . . : 192.165.20.190(Preferred)
Subnet Mask . . . . . : 255.255.255.0
Lease Obtained. . . . . : Tuesday, August 25, 2026 2:06:51 PM
Lease Expires . . . . . : Wednesday, September 2, 2026 2:06:50 PM
Default Gateway . . . . . :
DHCP Server . . . . . : 192.165.20.1
DHCPv6 IAID . . . . . : 50855975
DHCPv6 Client DUID. . . . . : 00-01-00-01-32-1F-9F-34-08-00-27-3F-84-96
DNS Servers . . . . . : 192.165.20.1
NetBIOS over Tcpip. . . . . : Enabled
```